

PWR33 MODEL 125VDC 100A BATTERY CHARGER CATALOGUE



Güç her zaman, her yerde

Power anytime, anywhere



220 Vdc

125 Vdc

110 Vdc

48 Vdc

30 Vdc

24 Vdc



Battery Chargers are designed in accordance with international IEC/EN 60146-1-1 standards

www.powerelektronik.com.tr

DEFINITIONS AND SYSTEM INFORMATIONS

WHAT ARE INDUSTRIAL RECTIFIERS - BATTERY CHARGERS?

Rectifier Products are used in utility HV (High Voltage), MV (Medium Voltage) and LV (Low voltage) energy control and automation systems to meet the needs such as relay control, breaker control, communication, automatic control and emergency lighting in case of power cut or recovery. These are products designed to be battery supported.

HOW DOES INDUSTRIAL RECTIFIER WORK?

Industrial Rectifiers takes 1 Phase or 3 Phase AC mains energy, reduce it to the desired level with the help of Stepdown transformer, and at the same time provide the necessary energy to the thyristor circuits in the rectifier circuit by providing galvanic isolation. The DC energy coming out of the rectification unit is filtered and converted into smoother and cleaner DC energy.

With the help of the rectifier software, this DC energy charges the batteries according to float-boost-equalizing charging modes and provides the necessary continuous energy to DC loads. In case of grid power failure, it provides all of its DC energy needs from the batteries. Batteries continue to supply DC loads for a pre-calculated period of time (such as 4,6,8,12 hours) in accordance with the programmed discharge level. When the grid is restored, the discharged batteries begin to recharge.

WHERE ARE INDUSTRIAL RECTIFIERS - BATTERY CHARGERS USED?

- » In power plants (Hydro, Thermal, Wind, Geothermal, Biomass, Natural Gas, etc.)
- » HV High voltage transmission and downcomer centers
- » MV Medium voltage transformers and distribution centers
- » Metro stations energy control centers
- » In control and command centers of all kinds of pipeline stations
- » DCS, Scada automation systems

WHY ARE THERE 24, 30, 48, 110, 125, 220 VDC TYPES?

The coil control voltage of electrical equipment such as relays and breakers that industrial rectifiers will control is designed at different voltages by different manufacturers.

Generally, low voltage 24VDC rectifier is used for low power consuming DC loads.

Since it is designed as 48Vdc, 110Vdc and 220Vdc to make compact designs at lower currents for DC control equipment that draws higher power-current, the rectifier design is also installed in accordance with this DC voltage.

HOW TO SIZING RECTIFIER BATTERIES?

In industrial rectifiers, battery types can sometimes be lead acid or Nickel-Cadmium type depending on need, sometimes preference, and sometimes specifications.

While OPZV tubular plate batteries are preferred in instant high current needs, OPZS and VRLA types are preferred in systems that require a long discharge time. Ni-Cd batteries can be preferred where high performance for many years and less temperature effects are desired.

When calculating battery capacities, the required DC energy is determined by extracting the load profile (current and duration information) and using the IEEE battery calculation method.

IN WHICH CASES ARE RECTIFIERS USED AS REDUNDANT BACKUP?

Especially in facilities where power outages may lead to critical consequences, in case one of the one of rectifier fails, it is preferred to use the other rectifier-battery set in parallel with backup to continue to supply DC energy needs without interruption.


3-PH INDUSTRIAL BATTERY CHARGER PROPERTIES


PWR33 MODEL 125VDC 100A




- ▶ 16-Bit DSP control
- ▶ Graphic LCD screen
- ▶ 5 control button
- ▶ 5% ripple
- ▶ Dry relay contacts for SCADA monitoring
- ▶ Over temperature protection
- ▶ Overload protection
- ▶ Programmable auto Boost Charge function
- ▶ Programmable Float Charge function
- ▶ Instantly input-output and battery voltage-current viewing
- ▶ Transformer and Thyristor based digital controlled rectifier technology
- ▶ Voltage and current full controls
- ▶ Dropper diode DC voltage regulation
- ▶ Front access
- ▶ Input voltage tolerance $\pm 15\%$ 3-ph 380/400/440 VAC
- ▶ Input Frequency 50 Hz/60 Hz $\pm 5\%$
- ▶ Input Surge and fuse protections
- ▶ Special multimeters for input/output/battery voltage-current monitoring
- ▶ Output voltage 125VDC nominal
- ▶ DC+ and DC - leakage protection
- ▶ Output short circuit protection
- ▶ Status and alarm LEDs
- ▶ Optional high IP protections
- ▶ Double safety door protection
- ▶ Mimic diagram

Supported Battery & Racks

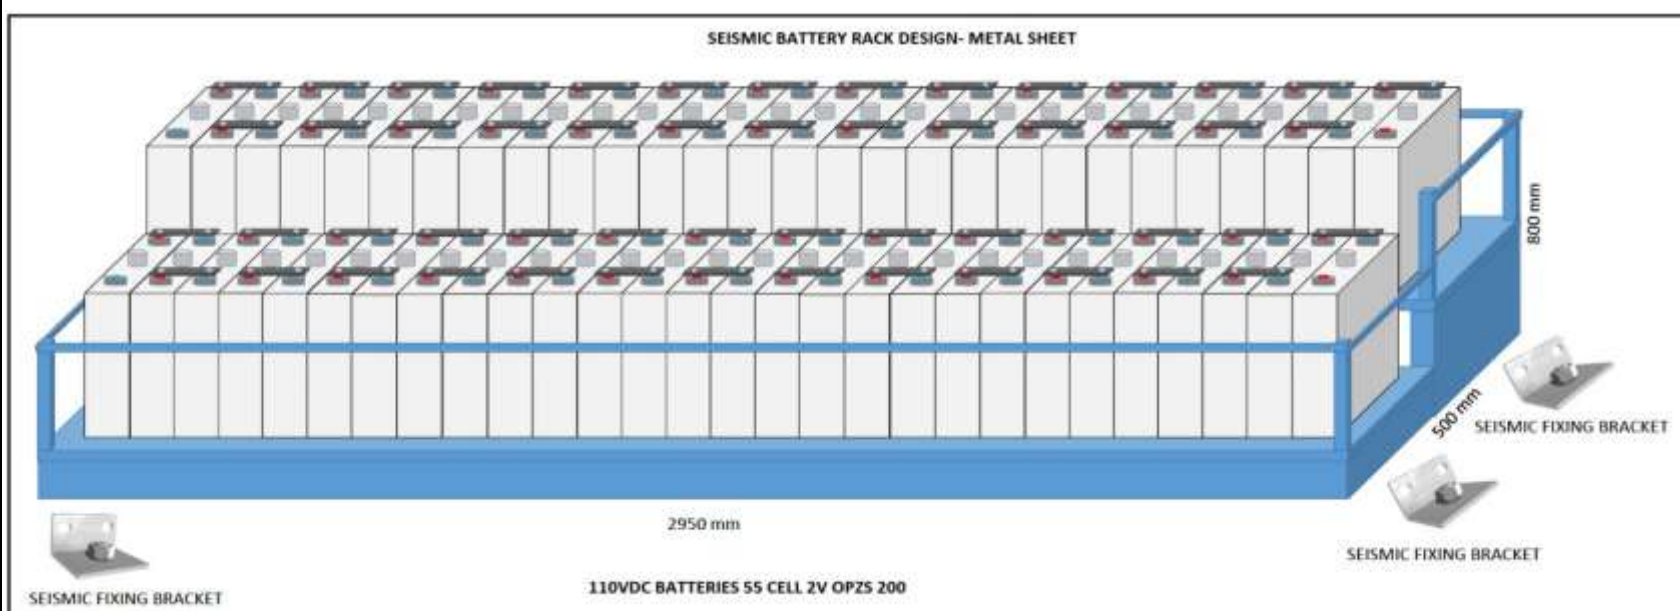

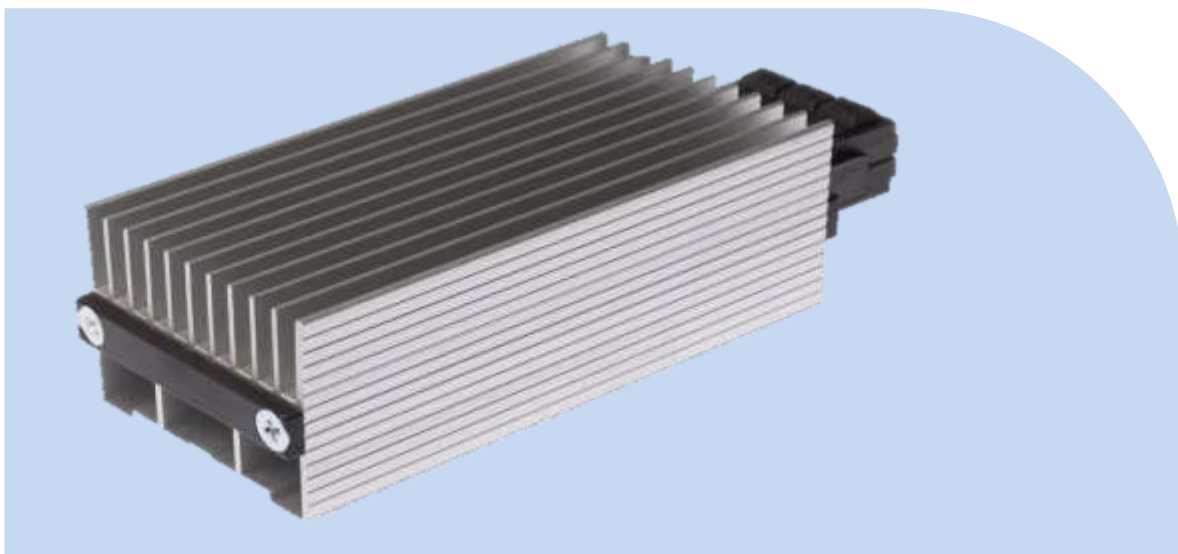


Condensing Protection by Heater

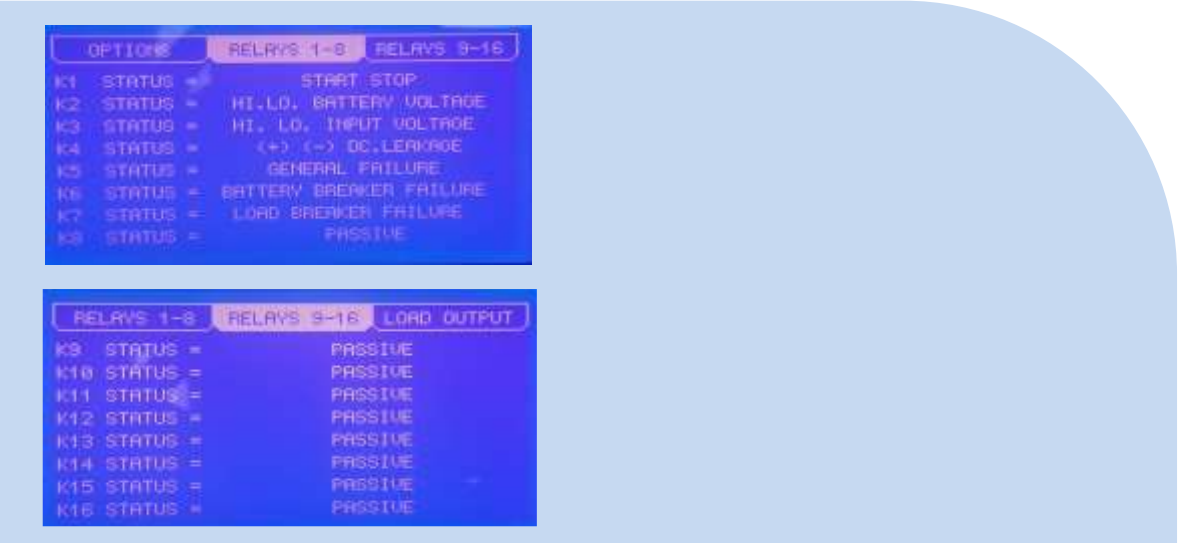

Programmable 2*8=16 Scada Dry Relay Contacts



Additional AC-DC Volt-Amp Meter

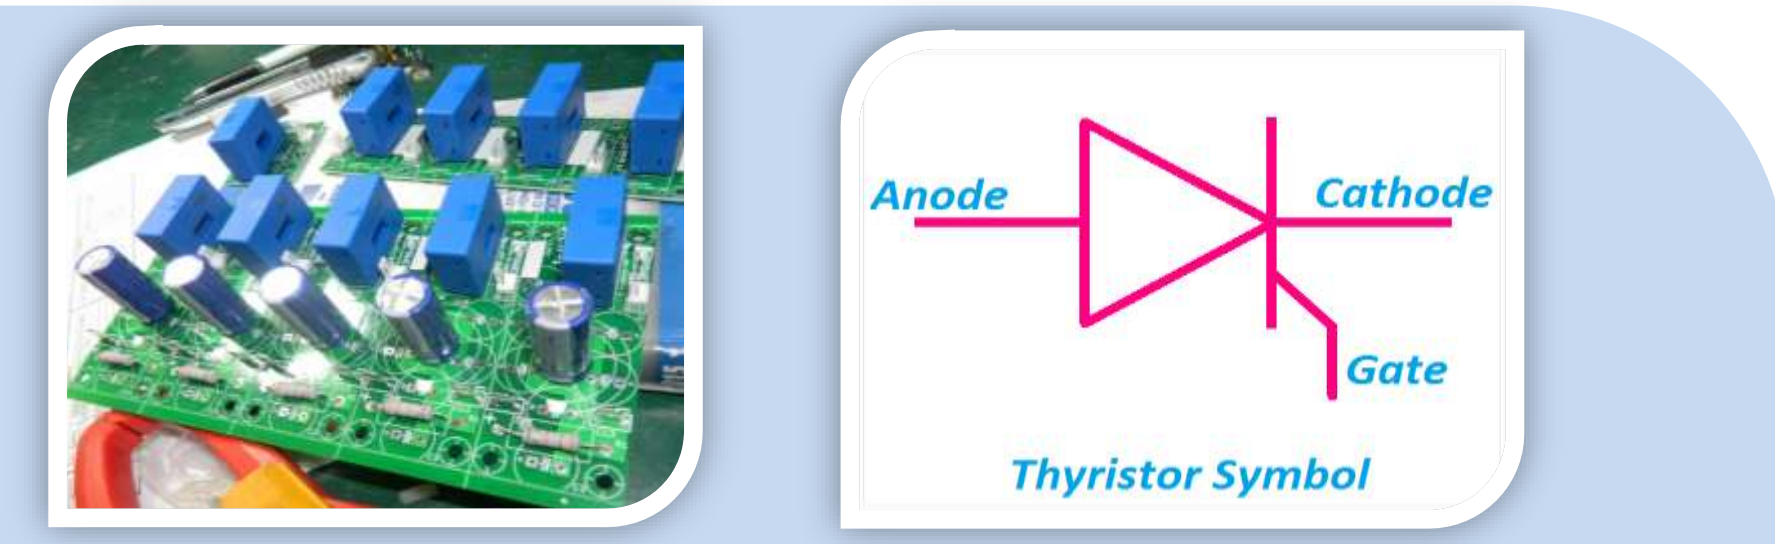


Industrial Control and Design
Thanks to Transformer and Thyristors




16 Pcs Alarm and Status LED Indicator



AC & DC Surge Arresters protections

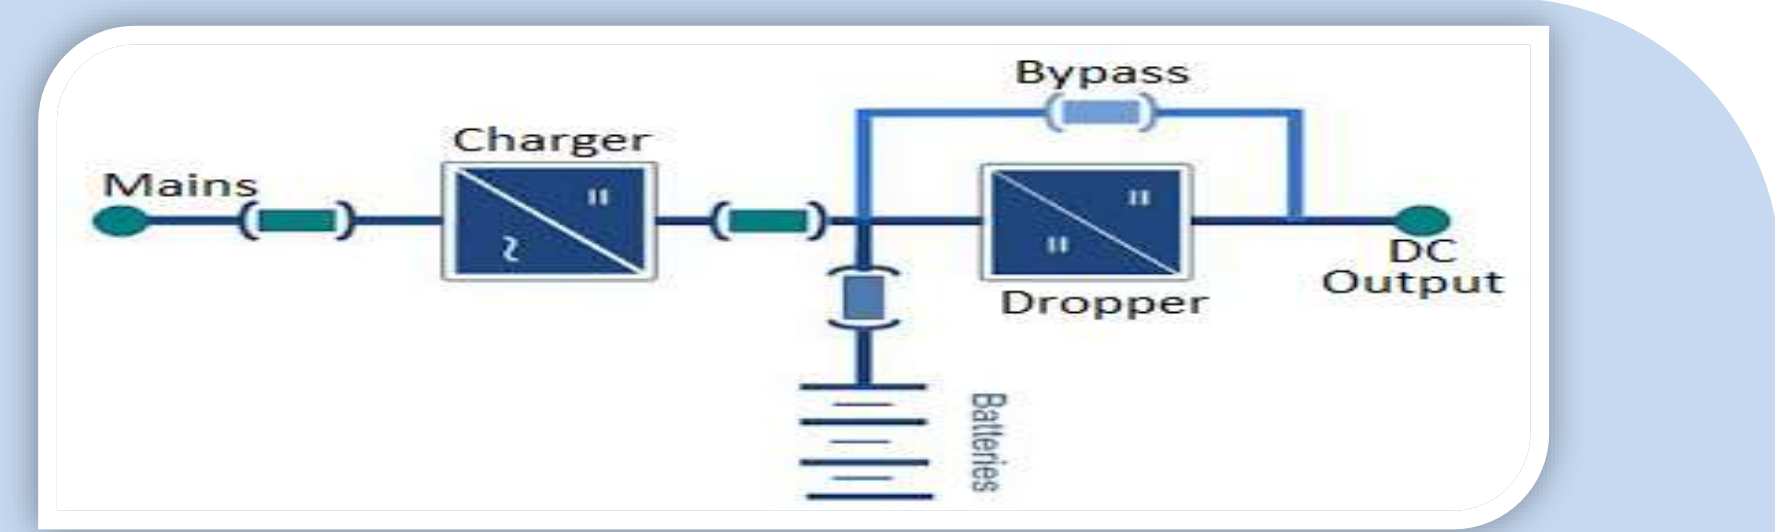

2-Stage Dropper diode function

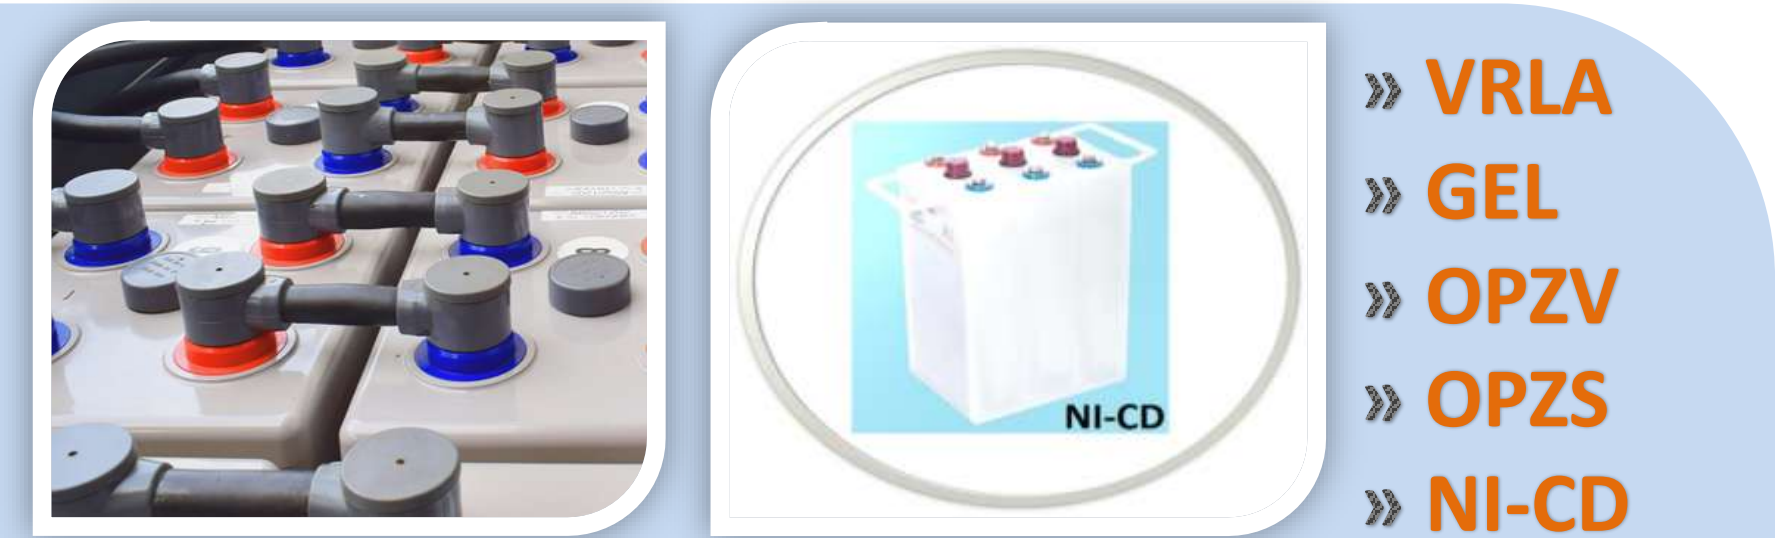


- » VRLA
- » GEL
- » OPZV
- » OPZS
- » NI-CD

Able to charge kind of battery types
and battery test scheduling function


3-PH INDUSTRIAL BATTERY CHARGER SYSTEM DESIGNS

PWR33 MODEL 125VDC 100A


General Single Connection Line Diagram

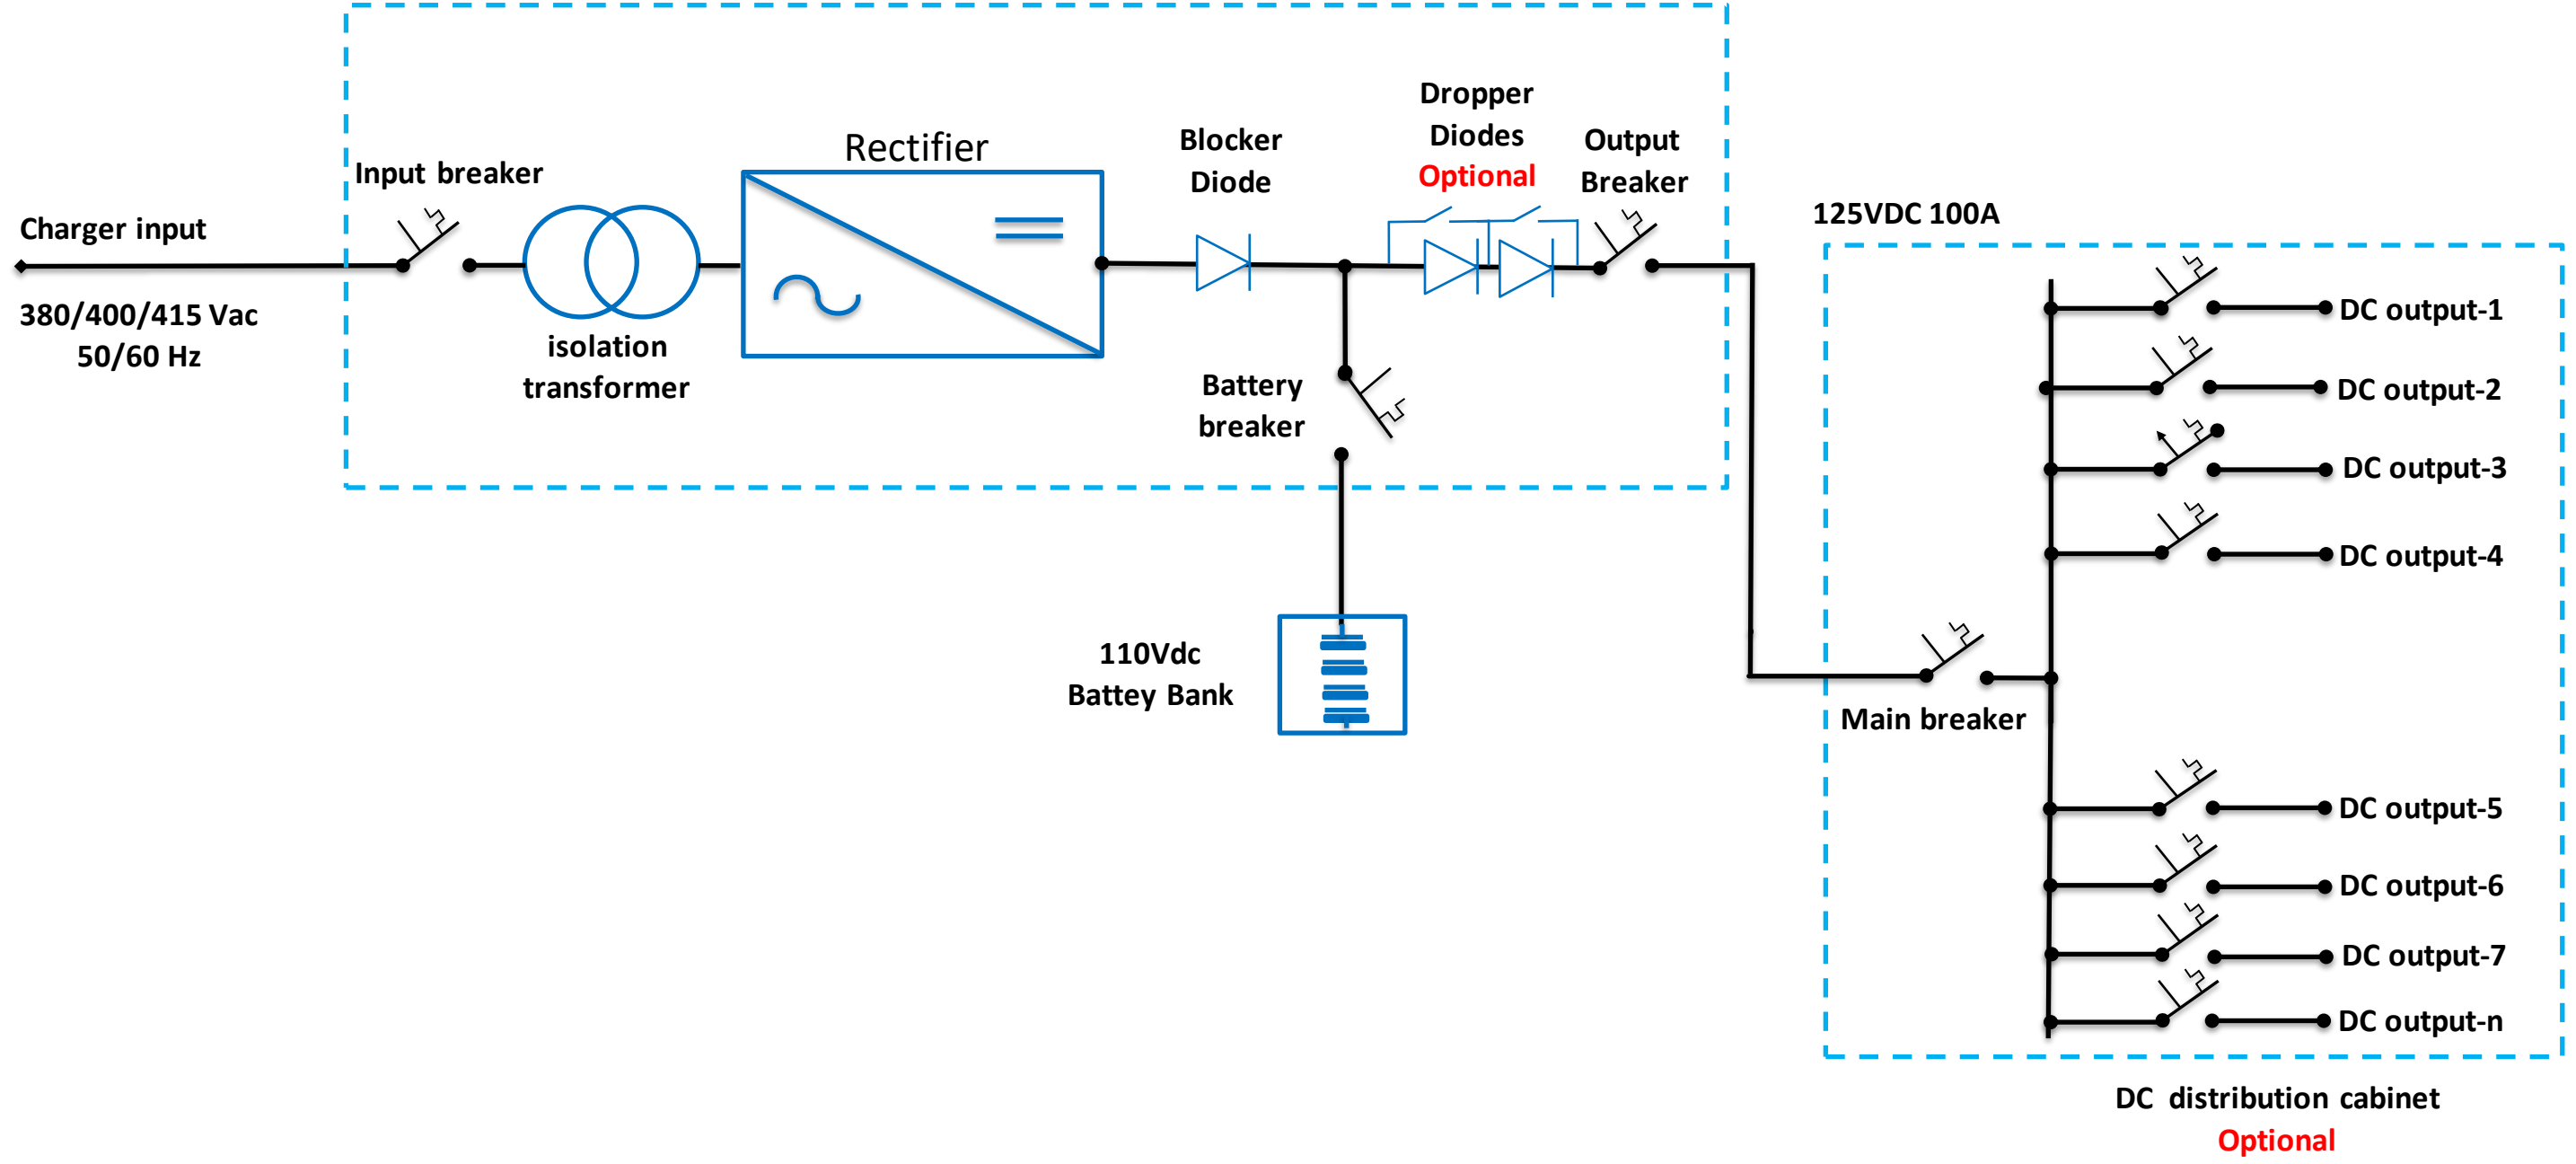


General Redundant Connection Line Diagram

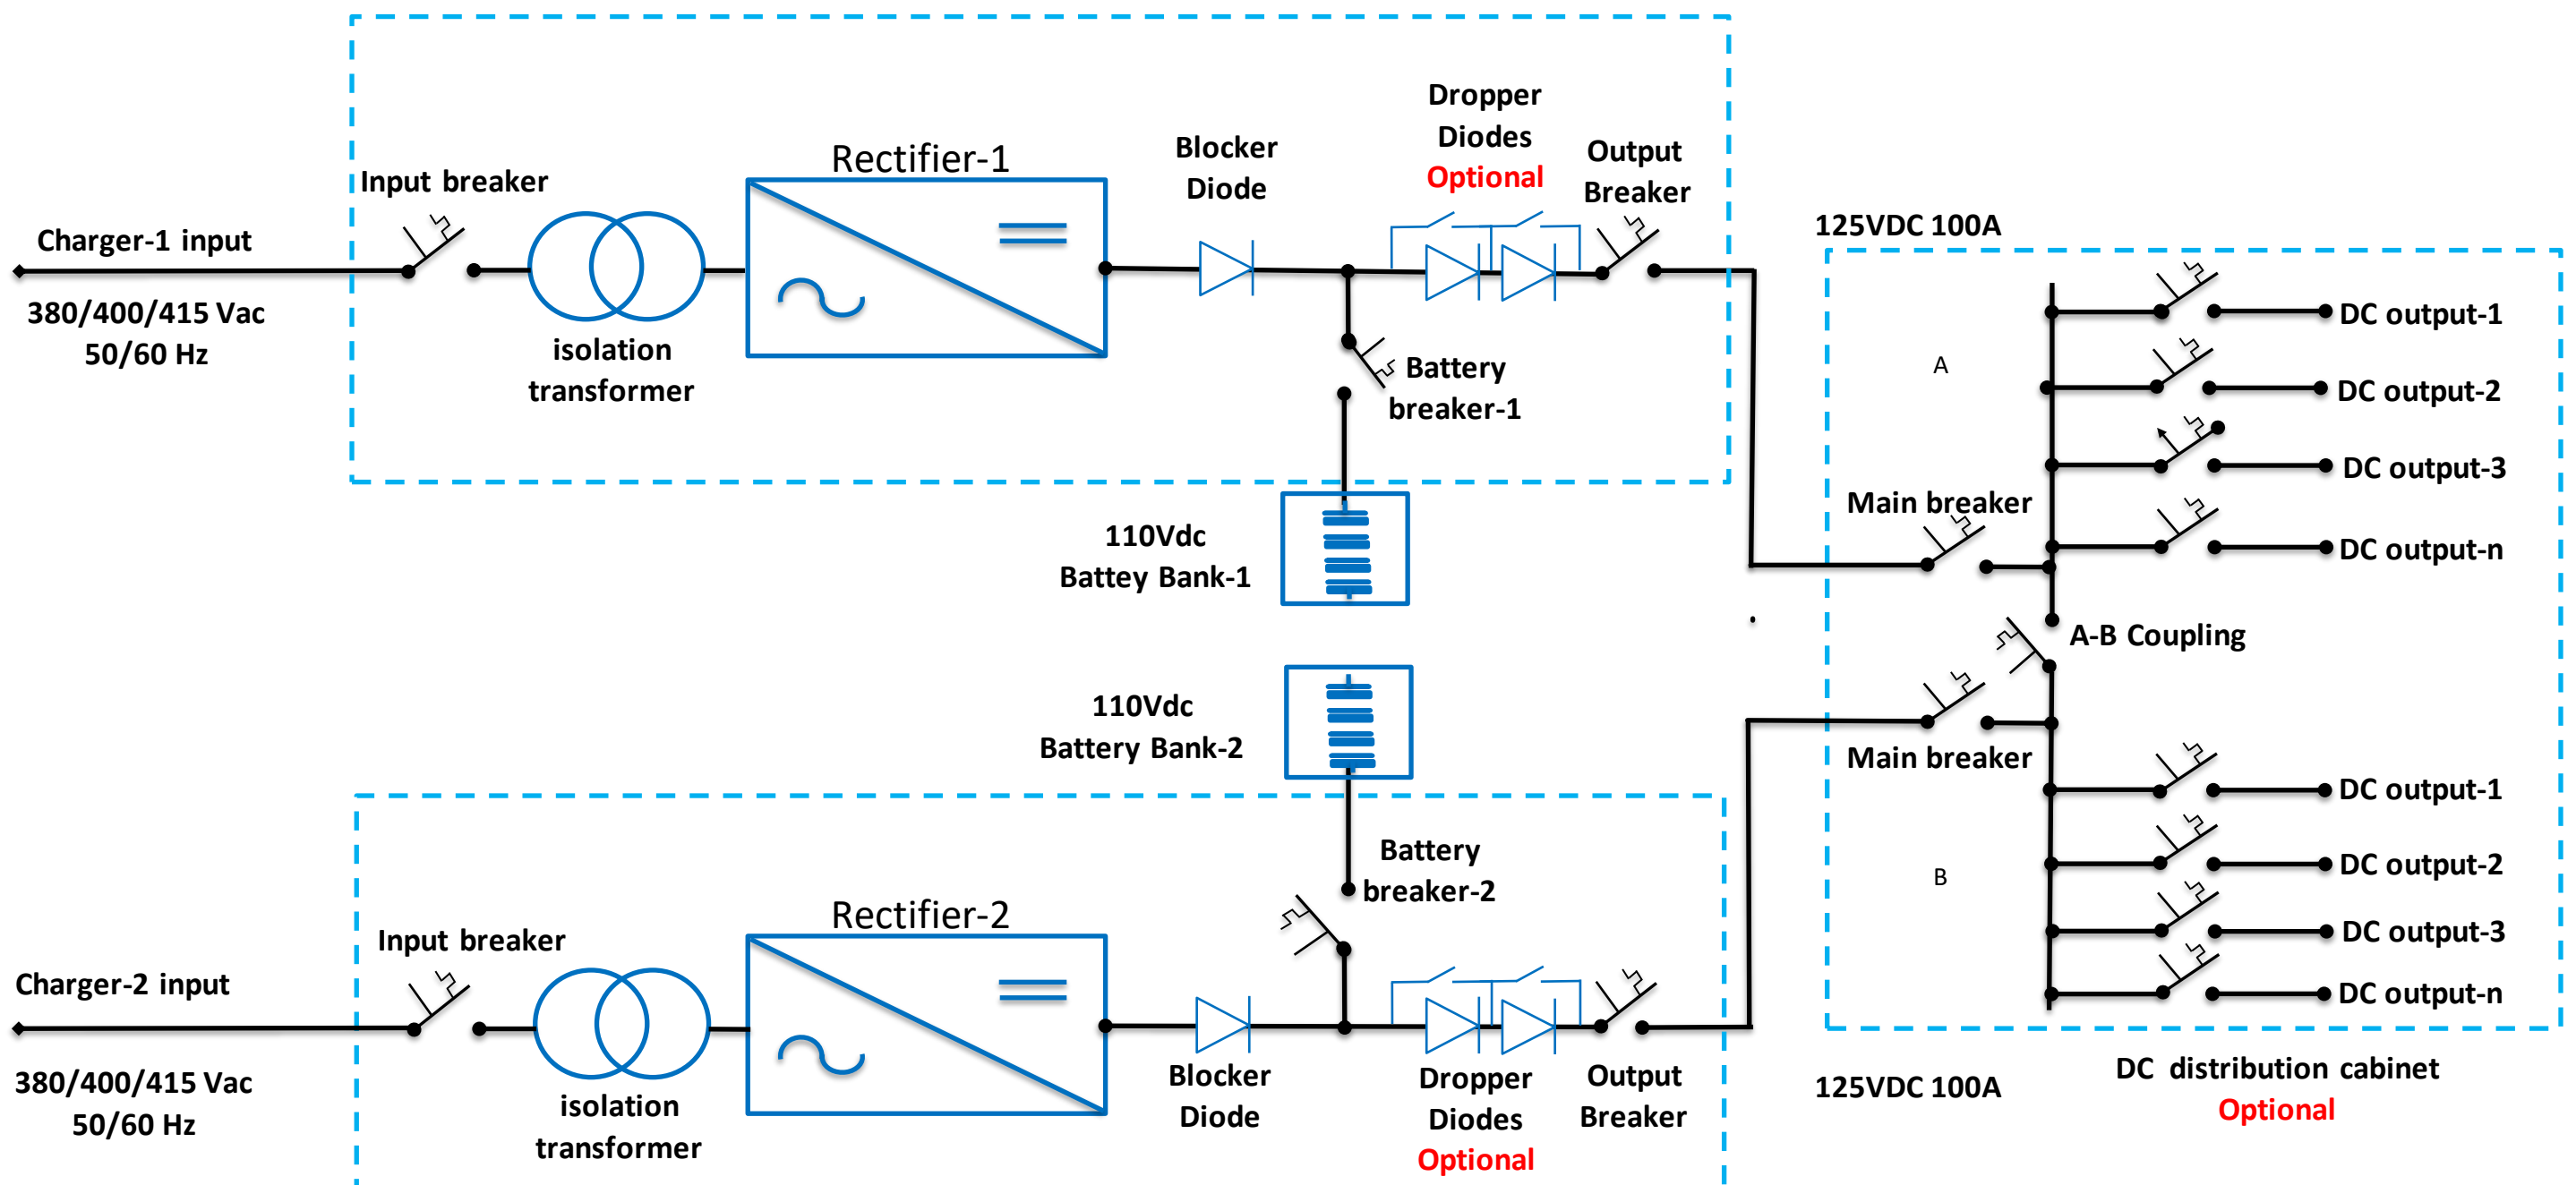

BATTERY CHARGER CABINET CUBICAL DRAWING

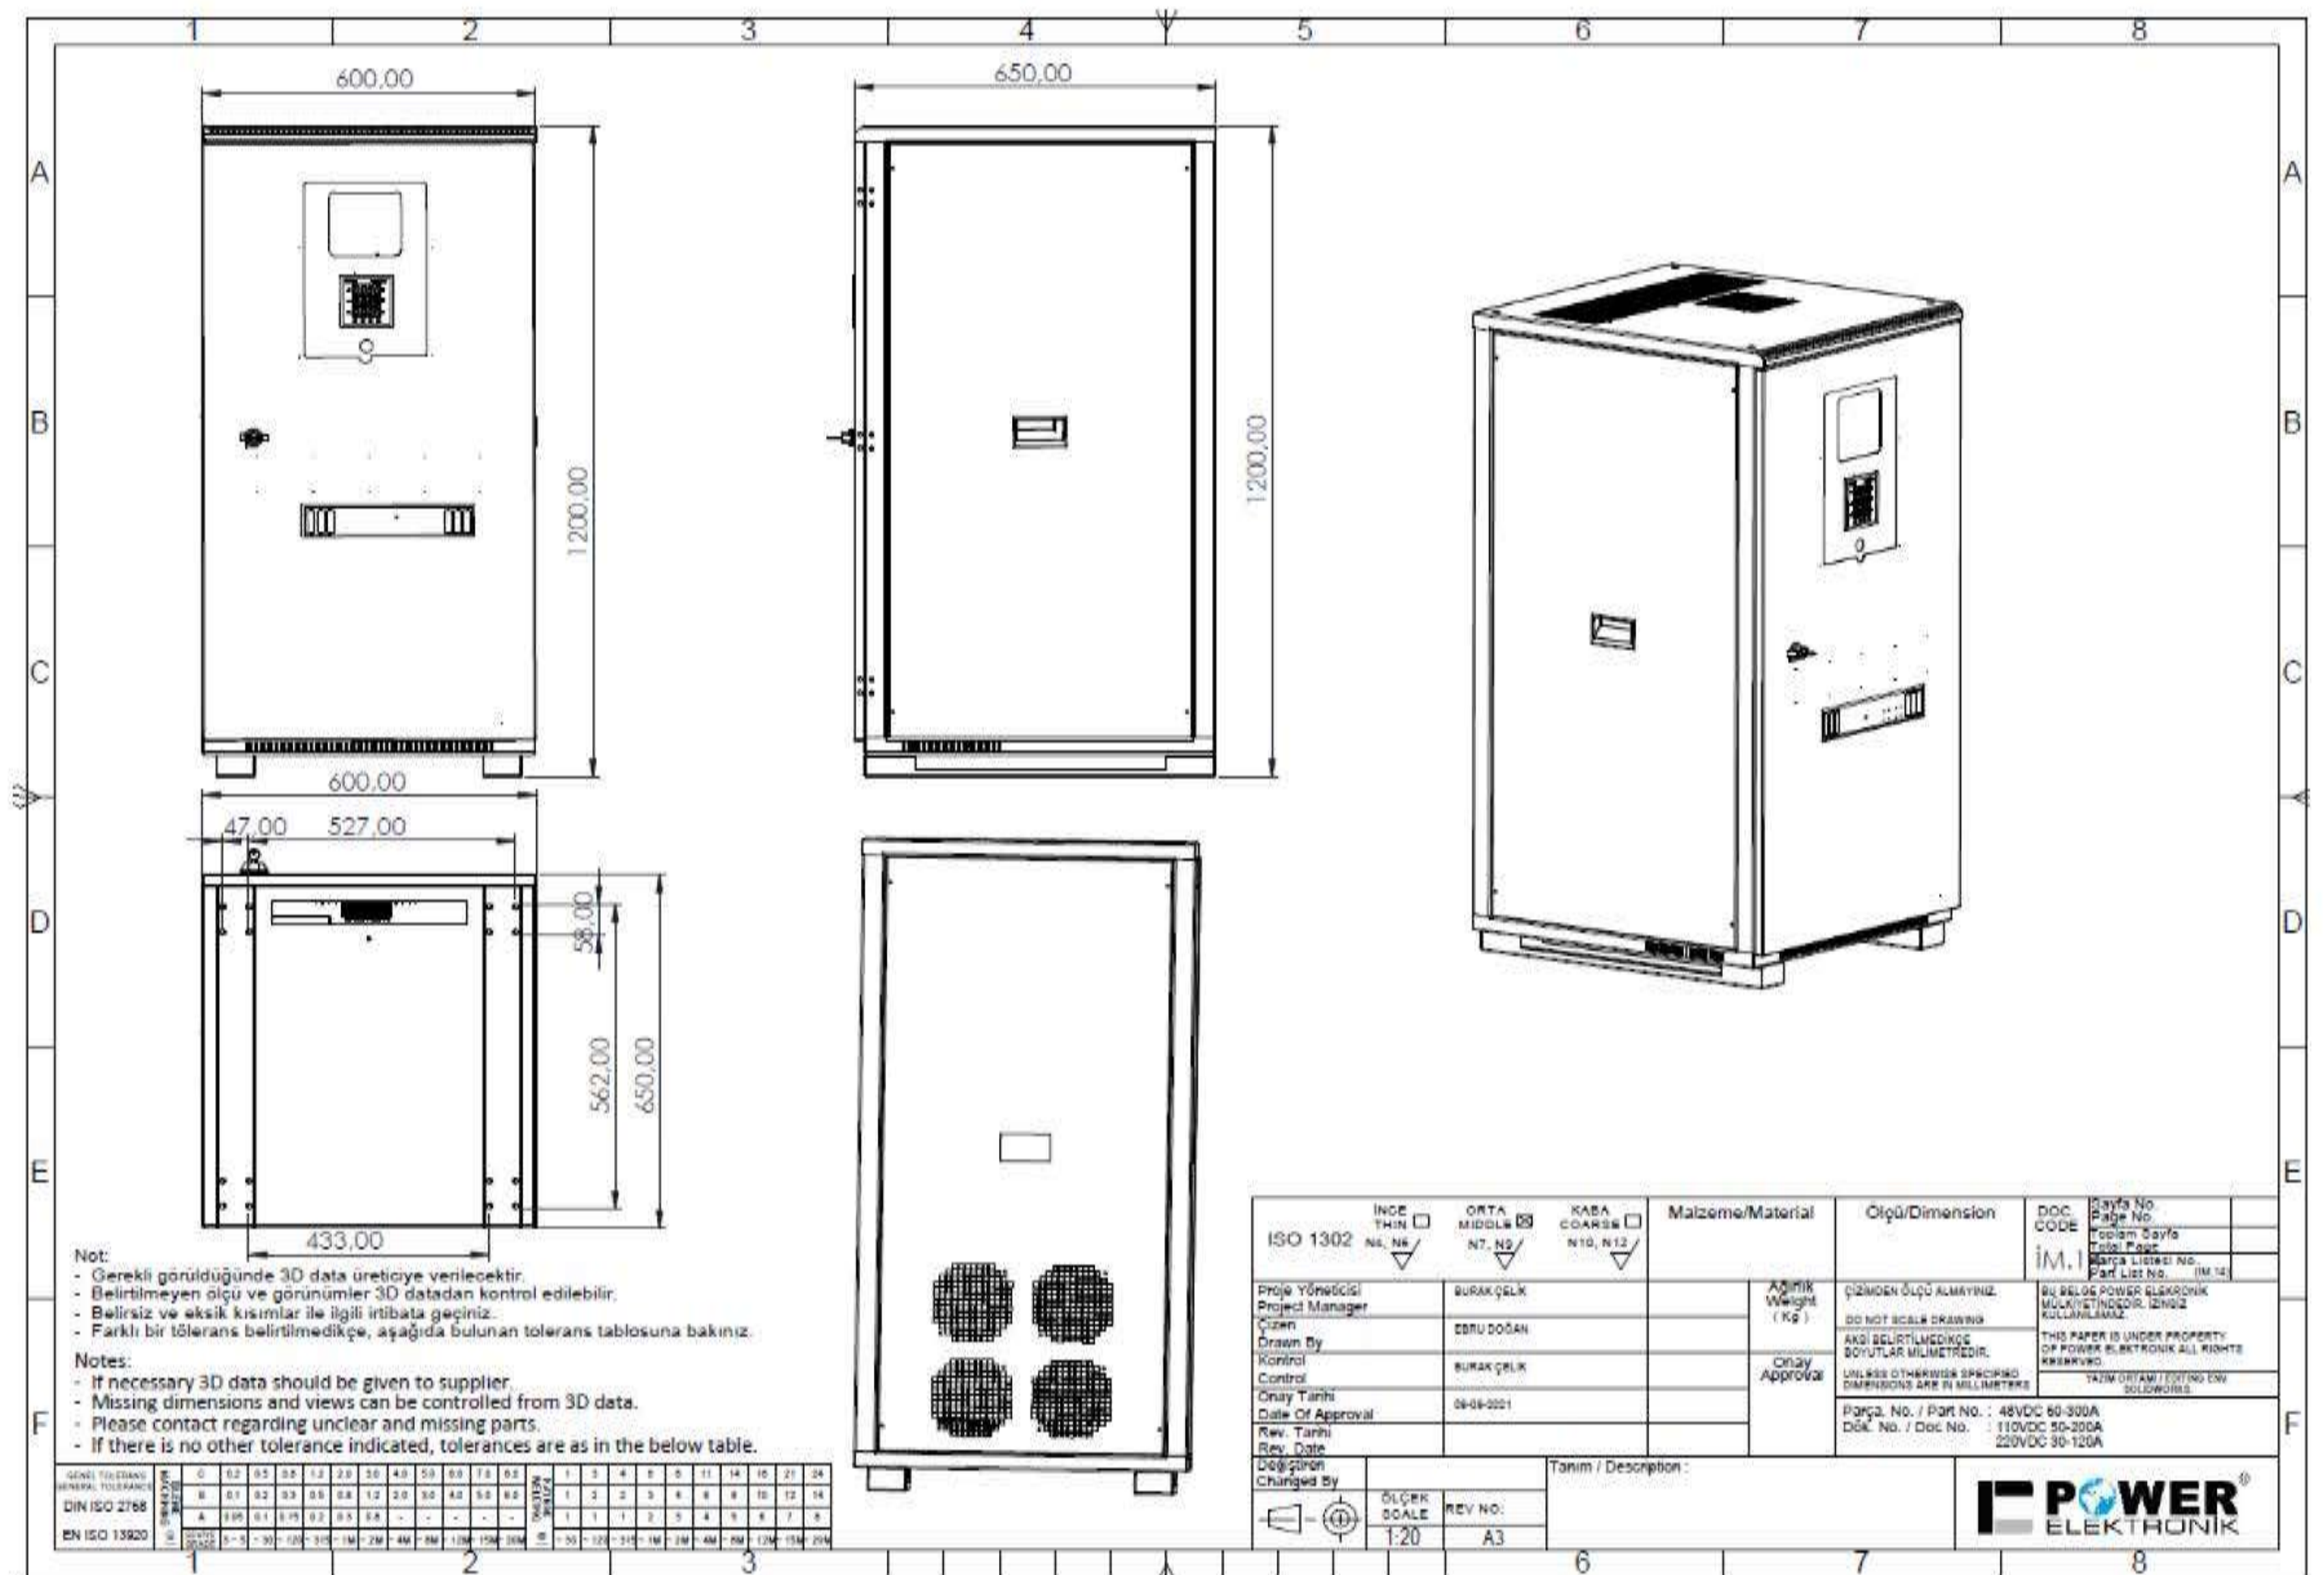

RECTIFIER ELECTRICAL SINGLE LINE DIAGRAM

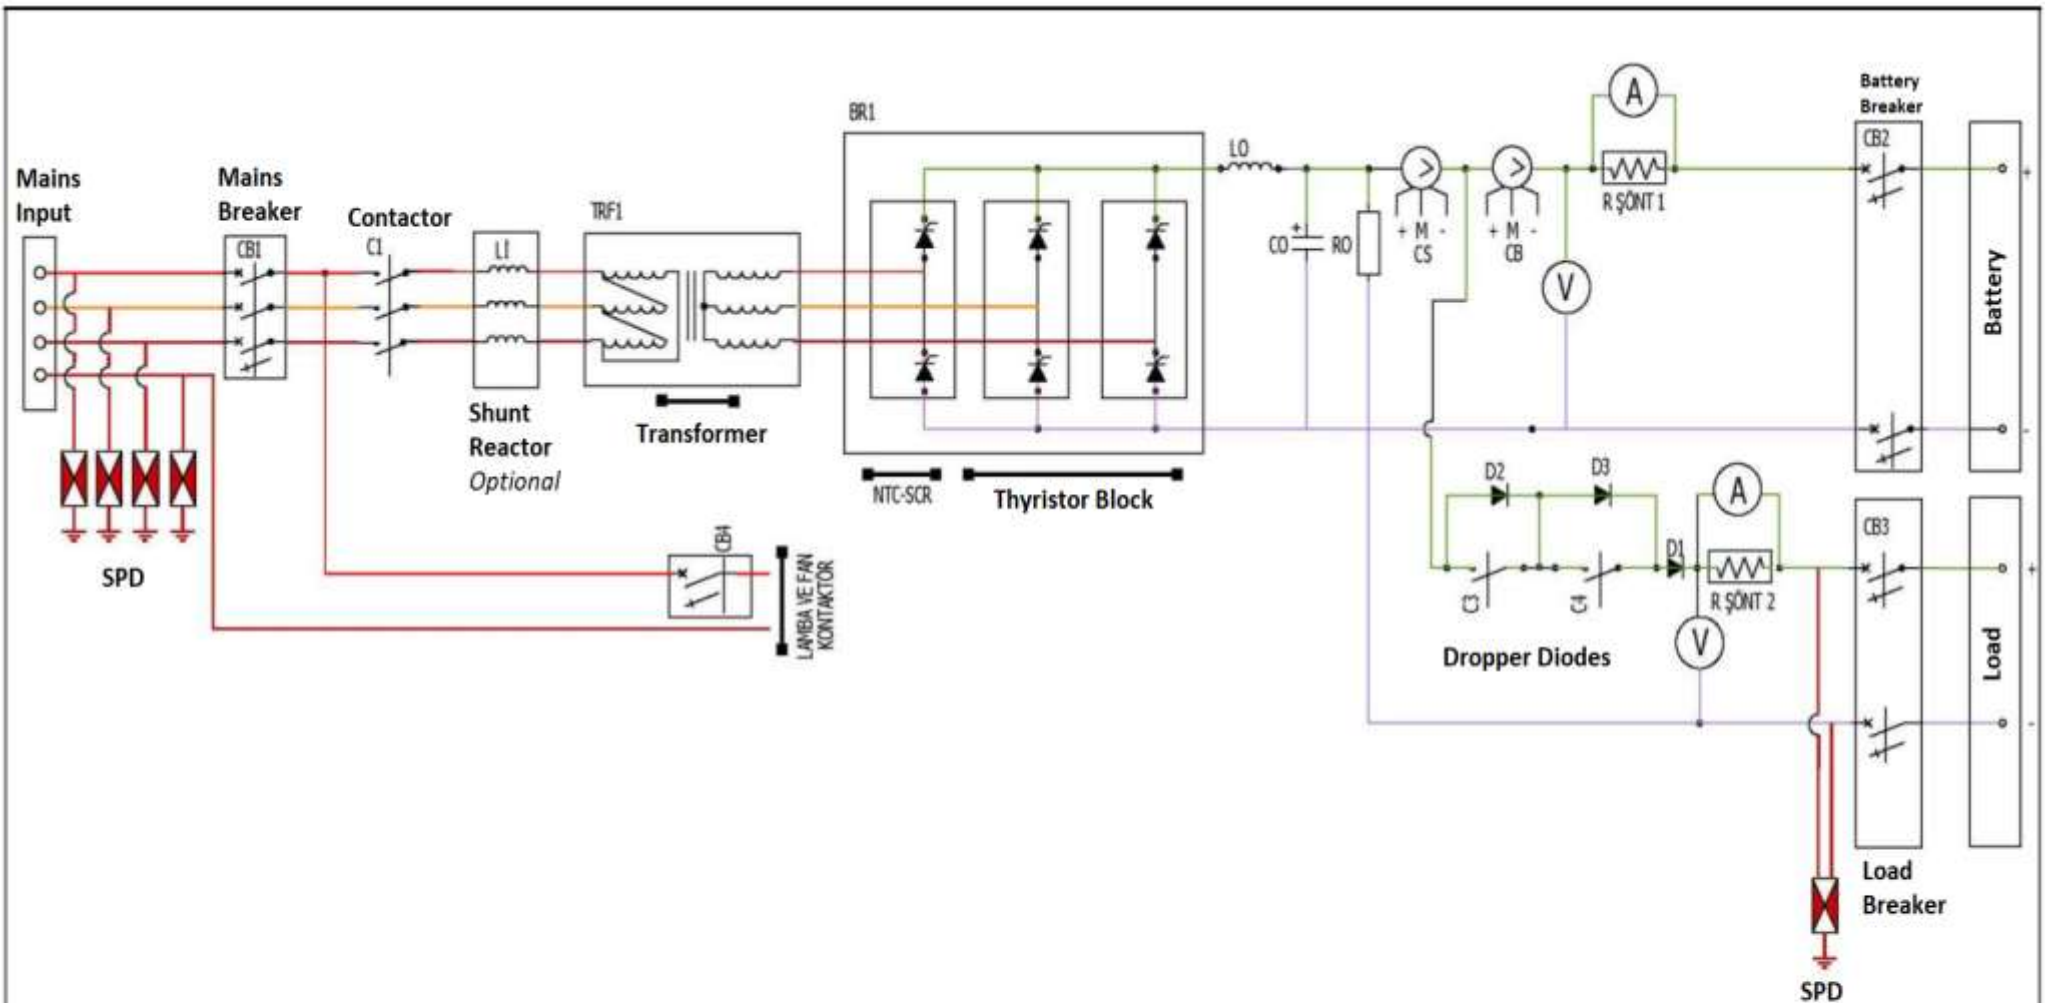

BATTERY CHARGER PROGRAMMABLE SCADA DRY RELAY OUTPUTS

OPTIONS		RELAYS 1-8	RELAYS 9-16
K1	STATUS =	START STOP	
K2	STATUS =	HI. LO. BATTERY VOLTAGE	
K3	STATUS =	HI. LO. INPUT VOLTAGE	
K4	STATUS =	(+)(-) DC LEAKAGE	
K5	STATUS =	GENERAL FAILURE	
K6	STATUS =	BATTERY BREAKER FAILURE	
K7	STATUS =	LOAD BREAKER FAILURE	
K8	STATUS =	PASSIVE	

RELAYS 1-8	RELAYS 9-16	LOAD OUTPUT
K9	STATUS =	PASSIVE
K10	STATUS =	PASSIVE
K11	STATUS =	PASSIVE
K12	STATUS =	PASSIVE
K13	STATUS =	PASSIVE
K14	STATUS =	PASSIVE
K15	STATUS =	PASSIVE
K16	STATUS =	PASSIVE



Relay-1
NC - Com - NO



Relay-2
NC - Com - NO



Relay-3
NC - Com - NO



Relay-4
NC - Com - NO



Relay-5
NC - Com - NO



Relay-6
NC - Com - NO



Relay-7
NC - Com - NO



Relay-8
NC - Com - NO



Relay-9
NC - Com - NO



Relay-10
NC - Com - NO



Relay-11
NC - Com - NO



Relay-12
NC - Com - NO



Relay-13
NC - Com - NO



Relay-14
NC - Com - NO



Relay-15
NC - Com - NO



Relay-16
NC - Com - NO

Available Dry Relay Definitions

1. **START STOP:**
Indicates the operating status of the Rectifier. When the start button on the front panel is pressed, the dry contact warns you.
2. **OVERHEAT:**
Whenever the heat reaches to the limit that defined in the menü, this dry contact gives warning.
3. **INPUT CIRCUIT BREAKER IS OFF:**
Whenever the input circuit breaker is off; this dry contact gives warning.
4. **BATTERY CIRCUIT BREAKER IS OFF:**
Whenever the batter circuit breaker is offi this dry contact gives warning.
5. **LOAD CIRCUIT BREAKER IS OFF:**
Whenever the load circuit breaker is off, this dry contact gives warning.
6. **HIGH BATTERY VOLTAGE:**
Whenever the voltage reaches to the “Vo High Limit” value, defined in the menu, this dry contact gives warning .
7. **LOW BATTERY VOLTAGE:**
Whenever the voltage reaches to the “Vo Low Limit” value, defined in the menu, this dry contact gives warning.
8. **BATTERY VOLTAGE HIGH + LOW:**
Controls both situations above in a single dry contact.
9. **FAN ERROR:**
Whenever the limits on the “Fan Error” menu is reached, the dry contact gives warning.
10. **BATTERY LINE DISCONNECTED:**
Whenver the device is “ON” and there is a disconnection on the battery cables, the dry contact gives warning.
11. **REVERSE BATTERY LINE:**
Indicates that the Battery connection is wrong. This warning is advised to be kept on the dry contact choices. Must be checked! Before the device is turned on.
12. **BATTERY GENERAL ERROR:**
Dry contact warns you whenever there is an Error about the Battery.
13. **(+) DC LEAK:**
(+) DC Leakage warning.
14. **(-) DC LEAK:**
(-) DC Leakage warning.
15. **(+) /(-) DC LEAK:**
(+) or (-) DC Leakage warning together.
16. **MAINS ON/OFF:**
Provides a dry contact information about the presence of the mains voltage.
17. **MAINS HIGH:**
If the mains voltage is higher than the value Vi HIGH LIMIT set on the MENU, dry contact gives warning.
18. **MAINS LOW:**
If the mains voltage is higher than the value Vi LOW LIMIT set on the MENU, dry contact gives warning.
19. **MAINS HIGH + LOW:**
In the case of the mains voltage out of the set values, dry contact gives warning.
20. **BOOST CHARGE:**
Indicates that the Rectifier is in the fast charging mode.
21. **FLOAT CHARGE:**
Indicates that the Rectifier is in the normal charging mode.
22. **GENERAL ERROR:**
If this option is chosen, whenever one of the errors above is occured, dry contact gives warning .

PWR33 INDUSTRIAL BATTERY CHARGER					
125VDC 100A BATTERY CHARGER TECHNICAL TABLE					
Rectifier Input:					
Voltage	400	VAC	-%15	+%15	
Current	35	A			
Frequency	50	Hz			
Input Fuse	60	A	Special value		No
Configuration	☒ Single Charger		☐ Redundant Charger		☐ Not Specified
Input Isolation transformer	Yes				
Load Output:					
Voltage	125	Vdc	Max. Voltage		132,00 by dropper
Current	100	Amp			
Dropper	Yes				
Ripple	< 5 % Without Battery		< 1 % With Battery		
Voltage Regulation:	± %1	rms	* battery mode		
Output Breakers	1 x 120A MCCB				
Additional Distribution Breaker	Not Specified				
Battery and Charging:					
Battery Block Voltage	Should be clarified		Battery Brand		Should be clarified
Battery Type	Should be clarified		Battery Strings		Lead Acid:60-62 Ni-Cd:100
Charging Current	1 to 100	Amper	Battery Breaker ampere		not specified
Float Charge Voltage	132,00	V/Cell	Battery placement		EXT Metal Rack-Seismic
Boost Charge Voltage	144,00	V/Cell	Battery capacity		Should be specified ah
Battery test voltage	125,00	V/Cell	Battery sizes L X H X W		See datasheet mm
Load Current Limit	100	A	Battery unit weight		See datasheet kg
Charge Characteristic	DIN 41773		Battery Configuration		1 string per charger
Cabinet:					
Cabinet type	Stand Floor		Control and LCD		Graphic LCD
Cooling	Fan cooling with thermostat controlled		Door stop		Right
Cable Entry	Bottom Entry		LCD language		English
Label	Grey - Pasted		Color		RAL 7035
Cabinet Lighting	Yes		Locking		Lockable
Cabinet dimensions	WxDxH: 600x650x1200 mm		Weight		250 kg
General Values:					
Operating Temperature Range	0 /+40 °C		IEC Standard		IEC 60146-1-1
Condensing resistance Heater	Yes		Noisy		<60 dB
Storage temp. Range	-25 /+55 °C		Humidity		<90%
Communication	RS232,dry relay, RS 485		Isolation Voltage		2kV 1 min
Altitude	Max. 1000m NN without deration		Protection degree		IP21
Protections:					
DC Low-High protection	☒	Overload	☒	Over Temp	☒
Phase Failure	☒	DC± to GND Leakage	☒	Reverse Battery	☒
Input Mains Surge protection	☒	DC Surge protection	☐	Emergency Stop	☐
Lamp Indicators:					
16 Pcs	Mains ON	Mains OFF	Start	Stop	Mains High
					
					Mains Low
					
					DC High
					
					DC Low
					
					+DC Leakage
					
					-DC Leakage
					
					Current Limit
					
					Fan Fault
					
					Over Temp.
					
					Battery Fault
					
					Temp. Comp.
					
					General Fault
					
Notes & Options :					
» Dry Relay contacts included					
» Dropper diode function is optional					
» RS 485 RTU Communication included					
» Blocker diodes included					
» Input AC Breakers included					
» Output DC Breakers included					
» Battery DC Breaker included					
www.powerelektronik.com.tr					