

# PWR11 MODEL 110VDC 25A BATTERY CHARGER CATALOGUE



*Güç her zaman, her yerde*

*Power anytime, anywhere*



220 Vdc

125 Vdc

110 Vdc

48 Vdc

30 Vdc

24 Vdc



Battery Chargers are designed in accordance with international IEC/EN 60146-1-1 standards

[www.powerelektronik.com.tr](http://www.powerelektronik.com.tr)

# DEFINITIONS AND SYSTEM INFORMATIONS

## WHAT ARE INDUSTRIAL RECTIFIERS - BATTERY CHARGERS?

Rectifier Products are used in utility HV (High Voltage), MV (Medium Voltage) and LV (Low voltage) energy control and automation systems to meet the needs such as relay control, breaker control, communication, automatic control and emergency lighting in case of power cut or recovery. These are products designed to be battery supported.

## HOW DOES INDUSTRIAL RECTIFIER WORK?

Industrial Rectifiers takes 1 Phase or 3 Phase AC mains energy, reduce it to the desired level with the help of Stepdown transformer, and at the same time provide the necessary energy to the thyristor circuits in the rectifier circuit by providing galvanic isolation. The DC energy coming out of the rectification unit is filtered and converted into smoother and cleaner DC energy.

With the help of the rectifier software, this DC energy charges the batteries according to float-boost-equalizing charging modes and provides the necessary continuous energy to DC loads. In case of grid power failure, it provides all of its DC energy needs from the batteries. Batteries continue to supply DC loads for a pre-calculated period of time (such as 4,6,8,12 hours) in accordance with the programmed discharge level. When the grid is restored, the discharged batteries begin to recharge.

## WHERE ARE INDUSTRIAL RECTIFIERS - BATTERY CHARGERS USED?

- » In power plants (Hydro, Thermal, Wind, Geothermal, Biomass, Natural Gas, etc.)
- » HV High voltage transmission and downcomer centers
- » MV Medium voltage transformers and distribution centers
- » Metro stations energy control centers
- » In control and command centers of all kinds of pipeline stations
- » DCS, Scada automation systems

## WHY ARE THERE 24, 30, 48, 110, 125, 220 VDC TYPES?

The coil control voltage of electrical equipment such as relays and breakers that industrial rectifiers will control is designed at different voltages by different manufacturers.

Generally, low voltage 24Vdc rectifier is used for low power consuming DC loads.

Since it is designed as 48Vdc, 110Vdc and 220Vdc to make compact designs at lower currents for DC control equipment that draws higher power-current, the rectifier design is also installed in accordance with this DC voltage.

## HOW TO SIZING RECTIFIER BATTERIES?

In industrial rectifiers, battery types can sometimes be lead acid or Nickel-Cadmium type depending on need, sometimes preference, and sometimes specifications.

While OPZV tubular plate batteries are preferred in instant high current needs, OPZS and VRLA types are preferred in systems that require a long discharge time. Ni-Cd batteries can be preferred where high performance for many years and less temperature effects are desired.

When calculating battery capacities, the required DC energy is determined by extracting the load profile (current and duration information) and using the IEEE battery calculation method.

## IN WHICH CASES ARE RECTIFIERS USED AS REDUNDANT BACKUP?

Especially in facilities where power outages may lead to critical consequences, in case one of the one of rectifier fails, it is preferred to use the other rectifier-battery set in parallel with backup to continue to supply DC energy needs without interruption.


## 1-PH INDUSTRIAL BATTERY CHARGER PROPERTIES


PWR11 MODEL 110VDC 25A




- ▶ 16-Bit DSP control
- ▶ Graphic LCD screen
- ▶ 5 control button
- ▶ Lower than 5% ripple
- ▶ Dry relay contacts for SCADA monitoring
- ▶ Over temperature protection
- ▶ Overload protection
- ▶ Programmable auto Boost Charge function
- ▶ Programmable Float Charge function
- ▶ Instantly input-output and battery voltage-current viewing
- ▶ Transformer and Thyristor based digital controlled rectifier technology
- ▶ Voltage and current full controls
- ▶ Dropper diode DC voltage regulation
- ▶ Front access
- ▶ Input voltage tolerance  $\pm 15\%$  1-ph 200/230/240 VAC
- ▶ Input Frequency 50 Hz/60 Hz  $\pm 5\%$
- ▶ Input Surge and fuse protections
- ▶ Special multimeters for input/output/battery voltage-current monitoring
- ▶ Output voltage 110VDC nominal
- ▶ DC+ and DC - leakage protection
- ▶ Output short circuit protection
- ▶ Status and alarm LEDs
- ▶ Optional high IP protections
- ▶ Double safety door protection
- ▶ Mimic diagram

### Supported Battery & Racks

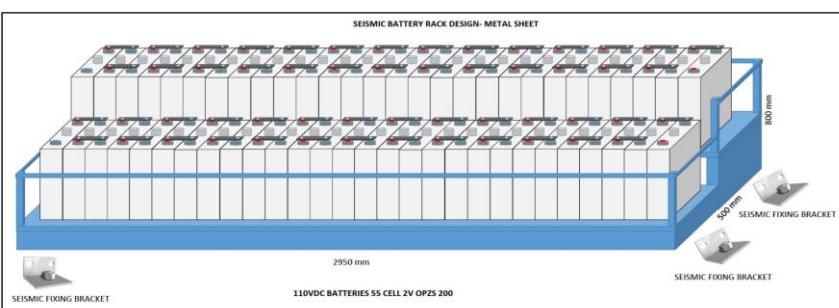

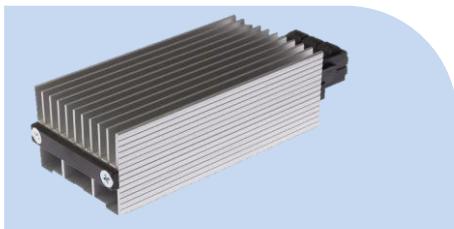

Condensing Protection by Heater

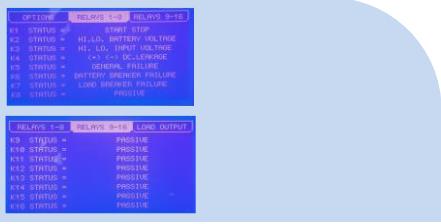

Programmable 2\*8=16 Scada Dry Relay Contacts



Additional AC-DC Volt-Amp Meter




Industrial Control and Design  
Thanks to Transformer and Thyristors



16 Pcs Alarm and Status LED Indicator



AC & DC Surge Arresters protections

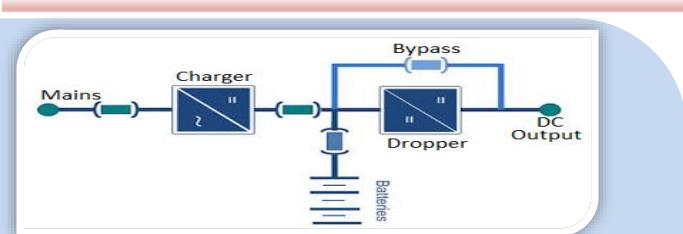

2-Stage Dropper diode function




- » **VRLA**
- » **GEL**
- » **OPZV**
- » **OPZS**
- » **NI-CD**

Able to charge kind of battery types  
and battery test scheduling function


## 1-PH INDUSTRIAL BATTERY CHARGER SYSTEM DESIGNS

PWR11 MODEL 110VDC 25A



General Single Connection Line Diagram

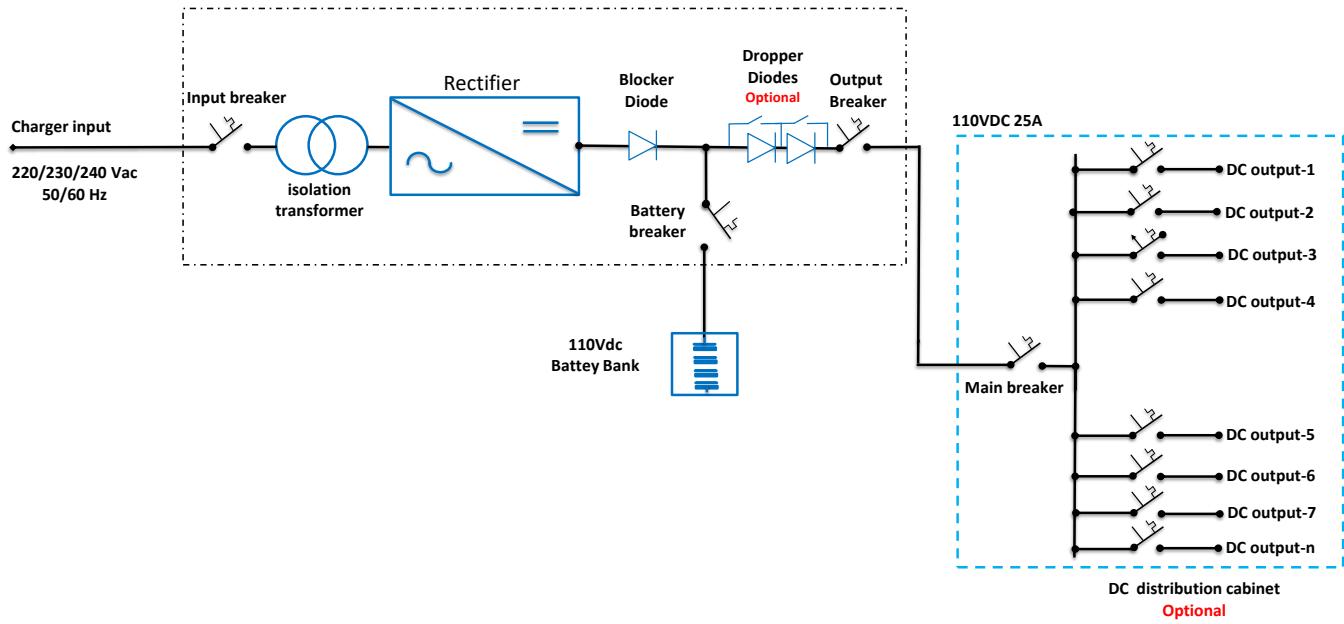

General Redundant Connection Line Diagram

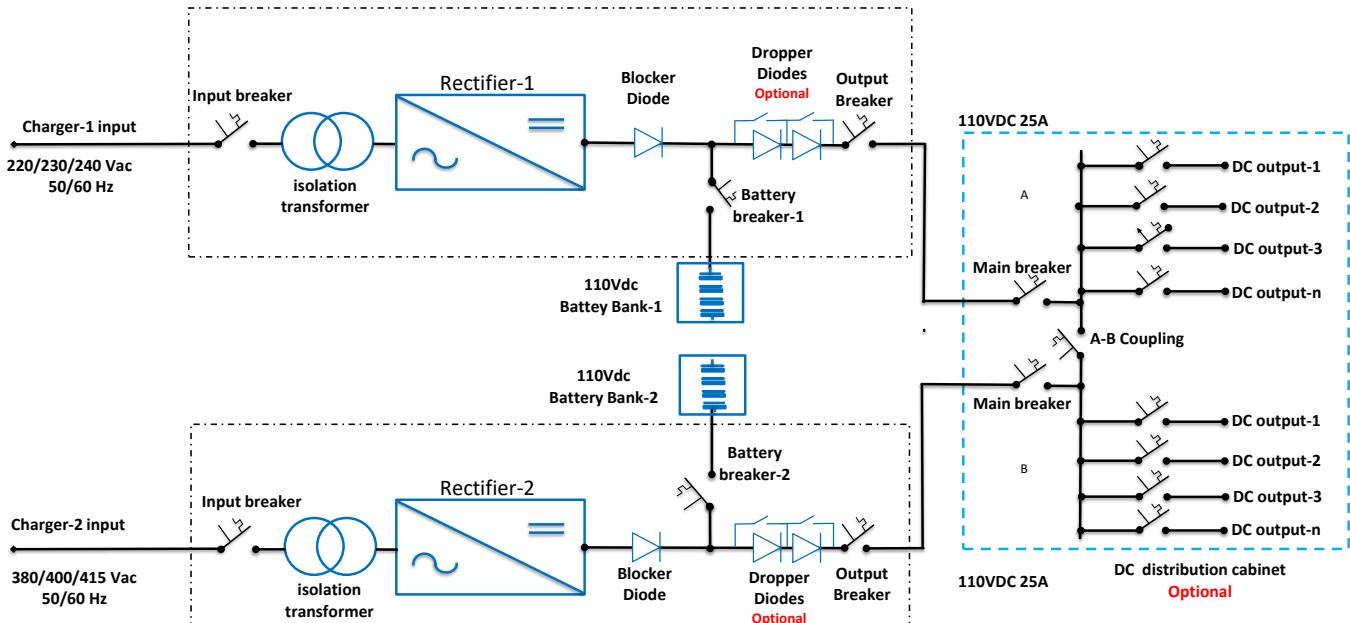


## BATTERY CHARGER CABINET CUBICAL DRAWING

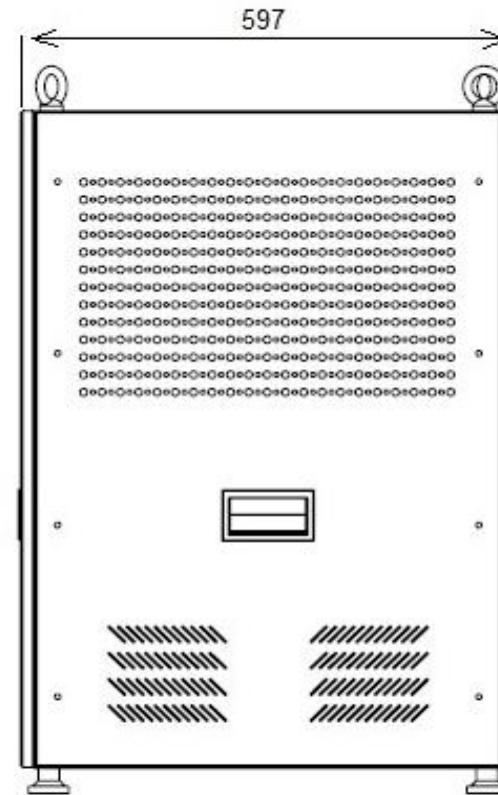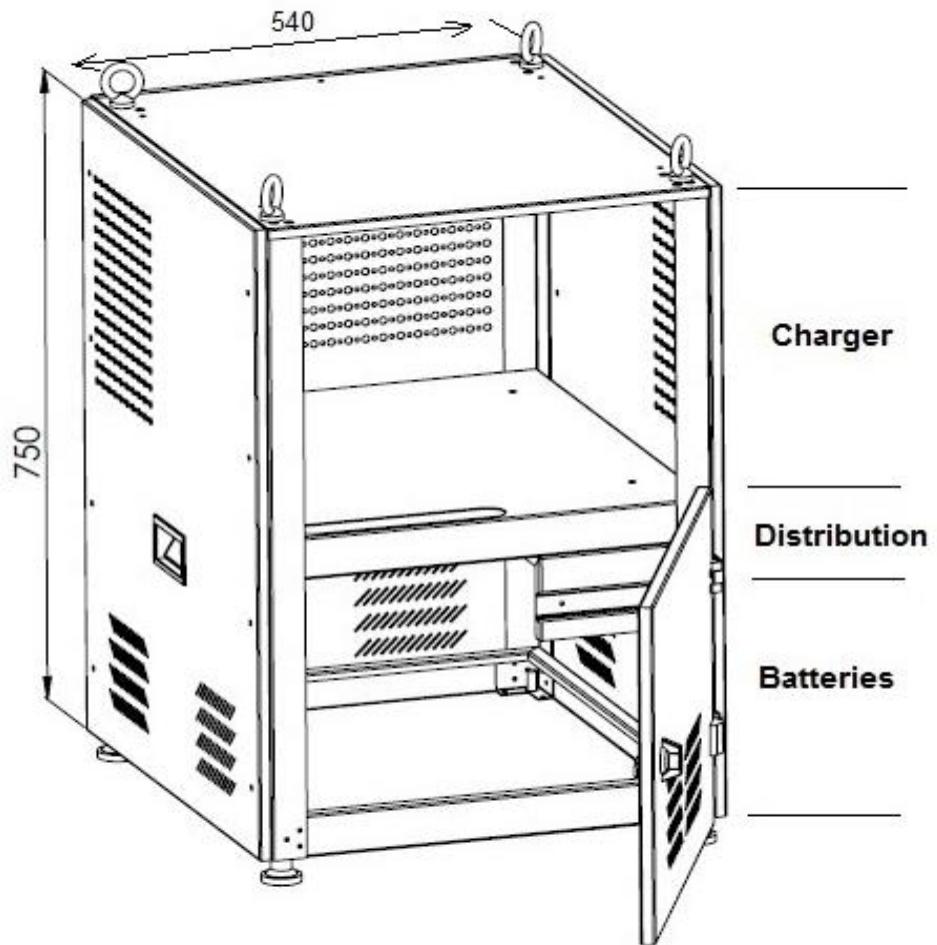

Cabinet Type	RT-9120-3
Charger Vdc/A	110V 5A / 10A / 20A / 25A 30A / 40A
Internal Battery	9 Pcs Up To 12V 55Ah

# RECTIFIER ELECTRICAL SINGLE LINE DIAGRAM

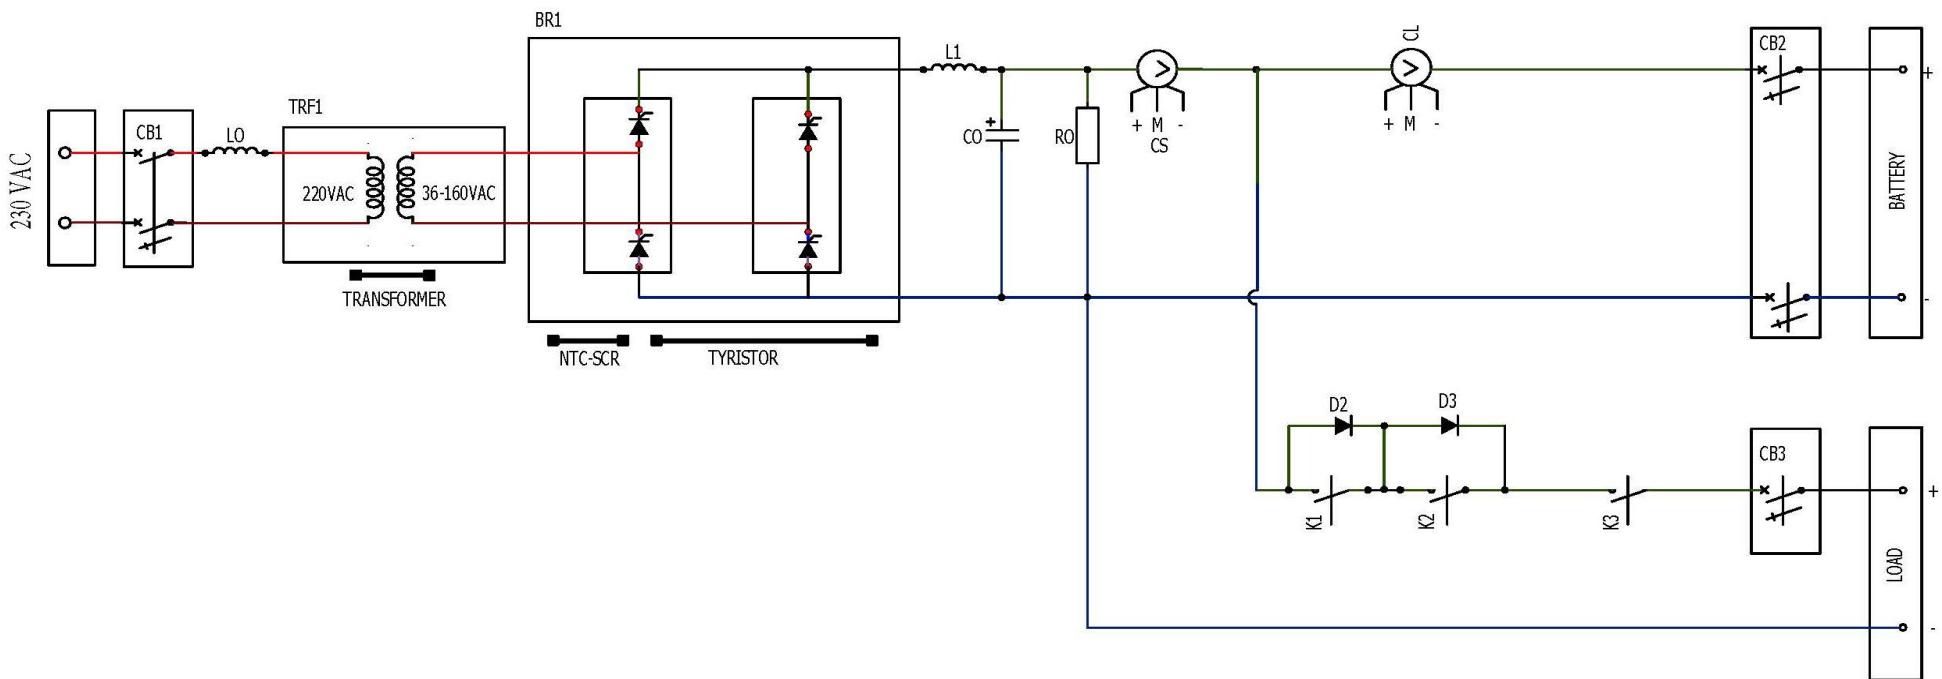

<b>POWER®</b> ELEKTRONİK	DRAWING	Ebru Doğan	REVİZİON MAKİNG	-----	MODEL	PWR33	PROJE	TEDAŞ MLZ 2018-065	DATE	18.03.2019	PAGE	
<b>POWER</b> ENGINEERING	CONTROL	Kayhan Kabil	REVİZİON NO/ DATE	-----	POWER		INPUT	220VAC	OUTPUT	24-48-110VDC	CONFIRMATION	

## BATTERY CHARGER PROGRAMMABLE SCADA DRY RELAY OUTPUTS

OPTION	RELAYS 1-8	RELAYS 9-16	LOAD OUTPUT
K1 STATUS =	START STOP		
K2 STATUS =	HIGH, LOW, BATTERY VOLTAGE		
K3 STATUS =	HIGH, LOW, INPUT VOLTAGE		
K4 STATUS =	(+/-) DC LEAKAGE		
K5 STATUS =	GENERAL FAILURE		
K6 STATUS =	BATTERY BREAKER FAILURE		
K7 STATUS =	LOAD BREAKER FAILURE		
K8 STATUS =	PASSIVE		
K9 STATUS =	PASSIVE		
K10 STATUS =	PASSIVE		
K11 STATUS =	PASSIVE		
K12 STATUS =	PASSIVE		
K13 STATUS =	PASSIVE		
K14 STATUS =	PASSIVE		
K15 STATUS =	PASSIVE		
K16 STATUS =	PASSIVE		

Relay-1 NC - Com - NO    Relay-2 NC - Com - NO    Relay-3 NC - Com - NO    Relay-4 NC - Com - NO    Relay-5 NC - Com - NO    Relay-6 NC - Com - NO    Relay-7 NC - Com - NO    Relay-8 NC - Com - NO

Relay-9 NC - Com - NO    Relay-10 NC - Com - NO    Relay-11 NC - Com - NO    Relay-12 NC - Com - NO    Relay-13 NC - Com - NO    Relay-14 NC - Com - NO    Relay-15 NC - Com - NO    Relay-16 NC - Com - NO

### Available Dry Relay Definitions

#### 1. START STOP:

Indicates the operating status of the Rectifier. When the start button on the front panel is pressed, the dry contact warns you.

#### 2. OVERHEAT:

Whenever the heat reaches to the limit that defined in the menü, this dry contact gives warning.

#### 3. INPUT CIRCUIT BREAKER IS OFF:

Whenever the input circuit breaker is off; this dry contact gives warning.

#### 4. BATTERY CIRCUIT BREAKER IS OFF:

Whenever the batter circuit breaker is off this dry contact gives warning.

#### 5. LOAD CIRCUIT BREAKER IS OFF:

Whenever the load circuit breaker is off, this dry contact gives warning.

#### 6. HIGH BATTERY VOLTAGE:

Whenever the voltage reaches to the "Vo High Limit" value, defined in the menu, this dry contact gives warning .

#### 7. LOW BATTERY VOLTAGE:

Whenever the voltage reaches to the "Vo Low Limit" value, defined in the menu, this dry contact gives warning.

#### 8. BATTERY VOLTAGE HIGH + LOW:

Controls both situations above in a single dry contact.

#### 9. FAN ERROR:

Whenever the limits on the "Fan Error" menu is reached, the dry contact gives warning.

#### 10. BATTERY LINE DISCONNECTED:

Whenvier the device is "ON" and there is a disconnection on the battery cables, the dry contact gives warning.

#### 11. REVERSE BATTERY LINE:

Indicates that the Battery connection is wrong. This warning is advised to be kept on the dry contact choices. Must be checked! Before the device is turned on.

#### 12. BATTERY GENERAL ERROR:

Dry contact warns you whenever there is an Error about the Battery.

#### 13. (+) DC LEAK:

(+) DC Leakage warning.

#### 14. (-) DC LEAK:

(-) DC Leakage warning.

#### 15. (+) /(-) DC LEAK:

(+) or (-) DC Leakage warning together.

#### 16. MAINS ON/OFF:

Provides a dry contact information about the presence of the mains voltage.

#### 17. MAINS HIGH:

If the mains voltage is higher than the value Vi HIGH LIMIT set on the MENU, dry contact gives warning.

#### 18. MAINS LOW:

If the mains voltage is higher than the value Vi LOW LIMIT set on the MENU, dry contact gives warning.

#### 19. MAINS HIGH + LOW:

In the case of the mains voltage out of the set values, dry contact gives warning.

#### 20. BOOST CHARGE:

Indicates that the Rectifier is in the fast charging mode.

#### 21. FLOAT CHARGE:

Indicates that the Rectifier is in the normal charging mode.

#### 22. GENERAL ERROR:

If this option is chosen, whenever one of the errors above is occured, dry contact gives warning .

# PWR11 INDUSTRIAL BATTERY CHARGER



## 110VDC 25A BATTERY CHARGER TECHNICAL TABLE

### Rectifier Input:

Voltage	230	VAC	-%15	+%15
Current	22	A		
Frequency	50	Hz		
Input Fuse	40	A	Special value	No
Configuration	<input checked="" type="checkbox"/> Single Charger	<input type="checkbox"/> Redundant Charger	<input type="checkbox"/> Not Specified	
Input Isolation transformer	Yes			

### Load Output:

Voltage	110	Vdc	Max. Load Voltage	127,88	by dropper
Current	25	Amp			
Dropper	Yes				
Ripple	< 5 % Without Battery		< 1 % With Battery		
Voltage Regulation:	± %1	rms	* battery mode		
Output Breakers	1 x 32A MCCB				
Additional Distribution Breaker	Not Specified				

### Battery and Charging:

Battery Block Voltage	Not Specified	Battery Brand	Not Specified	
Battery Type	Lead Acid,Ni-Cd, OPZV,OPZS		Battery Cells Nr	LeadAcid:54-55 Ni-Cd:87-92
Charging Current	1 to 25	Amper	Battery Breaker ampere	
Float Charge Voltage	127,88 V/Cell		Battery placement	EXT Metal Rack
Boost Charge Voltage	138,00 V/Cell		Battery capacity	Not Specified ah
Battery test voltage	110,00	V/Cell	Battery sizes L X H X W	See datasheet mm
Load Current Limit	25	A	Battery unit weight	See datasheet kg
Charge Characteristic	DIN 41773		Battery Configuration	1 string *1 charger

### Cabinet:

Cabinet type	Stand Floor	Control and LCD	Graphic LCD	
Cooling	Fan cooling with thermostat controlled		Door stop	Right
Cable Entry	Bottom Entry		LCD language	English
Label	Grey - Pasted		Color	RAL 7032
Cabinet Lighting	Yes		Locking	Lockable
Cabinet dimensions	WxDxH: 540 x 597 x 750 mm		Weight	100 kg

### General Values:

Operating Temperature Range	0 /+40 °C	IEC Standard	IEC 60146-1-1	
Condensing resistance Heater	Yes	Noisy	<65 dB	
Storage temp. Range	-25 /+55 °C		Humidity	<90%
Communication	RS232,dry relay, RS 485		Isolation Voltage	2kV 1 min
Altitude	Max. 1000m NN		Protection degree	IP21

### Protections:

DC Low-High protection	<input checked="" type="checkbox"/>	Overload	<input checked="" type="checkbox"/>	Over Temp	<input checked="" type="checkbox"/>
Phase Failure	<input checked="" type="checkbox"/>	DC± to GND Leakage	<input checked="" type="checkbox"/>	Reverse Battery	<input checked="" type="checkbox"/>
Input Mains Surge protection	<input checked="" type="checkbox"/>	DC Surge protection	<input checked="" type="checkbox"/>	Emergency Stop	<input checked="" type="checkbox"/>

### Lamp Indicators:

16 Pcs	Mains ON	Mains OFF	Start	Stop	Mains High	Mains Low	DC High	DC Low	+DC Leakage	-DC Leakage	Current Limit	Fan Fault	Over Temp.	Battery Fault	Temp. Comp.	General Fault

### Notes & Options :

» Dry Relay contacts included

» Dropper diodeS function included

» RS 485 RTU Communication included

» Blocker diodes included

» Input AC Breakers included

» Output DC Breakers included

» Battery DC Breaker included